


## 20. Rearview Mirror

### A: REMOVAL

- 1) Remove the TORX<sup>®</sup> screw (1).
- 2) Slide the rearview mirror (2) to the upper side (A) of windshield glass (3), and remove the mirror from mount (4).

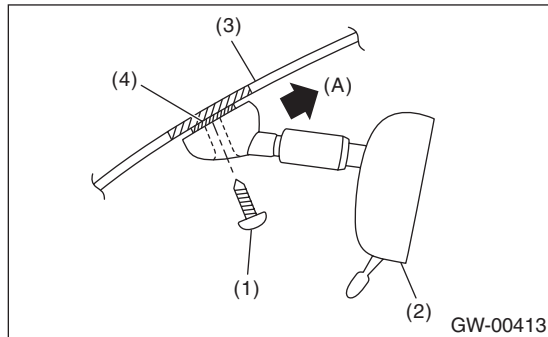

#### CAUTION:

- Be careful not to damage the mirror surface.
- Be careful not to damage the windshield glass.

### B: INSTALLATION

Install in the reverse order of removal.

#### *Tightening torque:*

*Refer to “COMPONENT” of “General Description”. <Ref. to GW-5, MIRROR, COMPONENT, General Description.>*

#### CAUTION:

When tightening the mounting TORX<sup>®</sup> screw, be sure to observe the tightening torque. Otherwise, the mount may be damaged in over-torque conditions.

### C: INSPECTION

Check that the mirror is not damaged.